

Screen Room Flooring - Installation Instructions

TOOLS NEEDED: Phillips Screwdriver, hammer, 1/8" drill bit, Electric drill, 3/16" masonry drill bit

PARTS ENCLOSED:

- ☐ Screen Room Floor
- ☐ (10) Phillips Attachment Screws
- ☐ (10) Finishing Washers
- ☐ (10) Plastic Anchors



The Screen Room Flooring is designed to fit the area directly under your awning. You should secure the flooring to your deck or patio using the supplied attachment screws and washers.

STEP 1. Position the flooring at the desired location on top of your screen room border. Beginning at one corner, make a mark on the flooring and deck/patio (See Figure 1).

STEP 2. For Wood Decks: Using the 1/8" bit, drill a hole into the wooden deck approximately 1" deep.

For Concrete Patios: Using the 3/16" masonry bit, drill a hole into the concrete patio approximately 1" deep. Insert a plastic anchor into the hole that you just drilled. Using a hammer, tap it flush with the surface of the concrete.

STEP 3. Secure the flooring to the deck or patio using an attachment Phillips screw and finishing washer as shown in Figure 1. Make sure that the head of the screw is not protruding above the top edge of the finishing washer.

STEP 4. Move to the next corner of the flooring and make sure that it has no wrinkles. Repeat steps 1 thru 3 for the remaining 3 corners. Use the remaining fasteners to secure around the rest of the flooring so that no one may trip.

If your deck or patio has an obstacle (such as stairs) that prevents the flooring from covering the entire area under the awning, simply trim the screen room flooring around the obstacle. You can use material such as carpet trim to cover the edge that you cut to fit your application.

Care and Maintenance

The Screen Room Flooring can be easily cleaned by simply rinsing with water. For more thorough seasonal cleanings, you can clean the flooring with a mild detergent or you can call 800-876-2340 to order a SunSetter Cleaning and Maintenance Kit.

WARNING: AFTER IT GETS WET, THE SURFACE OF THE FLOORING MAY BE SLIPPERY WHILE THE WATER DRAINS THROUGH THE FABRIC.

