

# ASSEMBLY INSTRUCTIONS



# Cottage Picket Gate

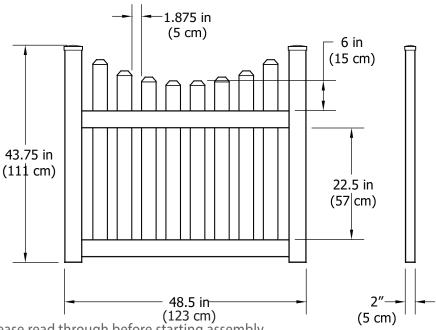

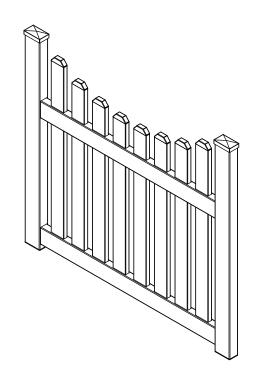

Picket cap comes

installed

Please read through before starting assembly.

#### Check Box for These Contents (1 Box)

In the event of damaged, missing or defective parts please call our customer service dept. at 1800 282 9346 (Mon. to Fri. 8:00 AM to 4:00 PM EST).

Post cap comes

installed

- 1. **Posts (2)** 2" x 3 1/2" x 43"(5 cm x 8 cm x 109 cm) 10841
- 2. **Top Rail (1)** 1 1/2" x 3 1/2"x 48 1/4"(4 cm x 8 cm x 123 cm) 10842
- 3. **Bottom Rail (1)** 1 1/2" x 3 1/2" x 48 1/4"(4 cm x 8 cm x 123 cm) 10843
- 4. **Pickets (2)** 7/8" x 3"x 38 1/2"(2 cm x 8 cm x 98 cm) 10112
  - Pickets (2) 7/8" x 3"x 36 1/4"(2 cm x 8 cm x 92 cm) 10111
  - Pickets (2) 7/8" x 3"x 35" (2 cm x 8 cm x 89 cm) 10114
  - Pickets (2) 7/8" x 3"x 34 1/4"(2 cm x 8 cm x 87 cm) 10110
- 5. Steel Hinge Set (1) 30020
- 6. Steel Latch Gate Set (1) 30023

Hardware Kit (Includes):

- 7. Self-tapping stainless Screws (16) 5/8" (16 mm) 20016
- 8. Self-tapping stainless Screw with 1/4" (0.64 cm) Hex Head 1" (2.5 cm)
- 9. Self-tapping stainless Screw with #8 Hex Head 1" (2.5 cm) 21002

(\*) Gate will fit:

Nantucket Legacy, Nantucket Deluxe, Fairfield Deluxe, Fairfield, Westchester, Newport.

#### Tools You Will Need

- Cordless Drill with #2 Phillips bit and 1/8" (3 mm) drill bit.
- 3/8" (10 mm) Socket Wrench
- Phillip Screwdriver
- 11/16" (18 mm) Or adjustable wrench
- Tape measure, Square and Level
- M10 Socket Diameter of 14.7mm


# Not to Scale


5



#### **General Information**

- Read Instructions through carefully, before beginning assembly.
- When handling components, place on a non-abrasive surface (I.e. Shipping box)to avoid scratching.
- We recommend an area approx 5'x 5' 1.5 m x 1.5 m) for unobstructed handling.

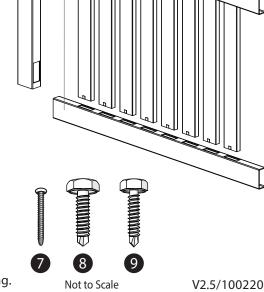

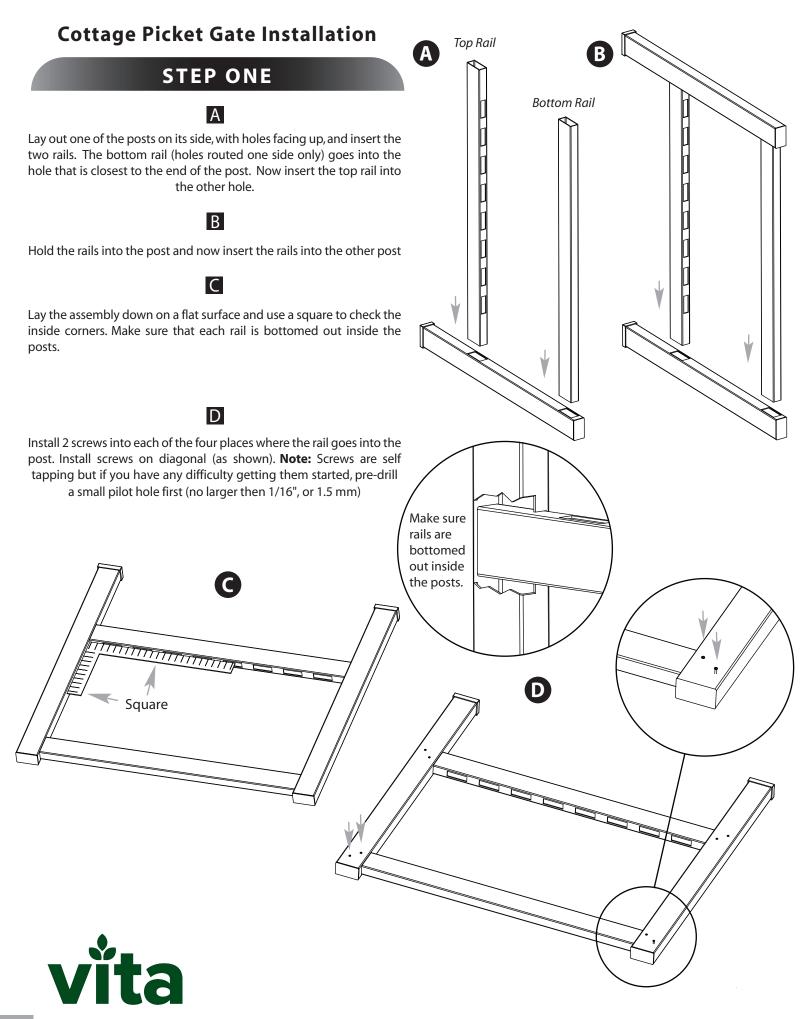

#### **STEP TWO**

#### Hinges and Latch Installation

Now determine which way your gate is going to open in your arbor. This will help you determine which side of the gate to install the hinge on. After you have determined which edge of the gate post the hinges are going to be installed on, turn the gate so that the screws you installed in D on the previous page are facing down. This way these screws will not be in the way when putting on the hinge.



Separate the hinges (part 5) into two halves. Place the half with the "eye holes" onto the gate post, centering it at the end of the top rail as illustrated. Pre-drill each pilot hole, then attach the hinge with the black screws provided in the hinge kit.




As in the previous step, place one half of the hinge onto the gate post. The second hinge should be installed 16 1/2" (42 cm) down from the top hinge (see illustration B). This hinge will be installed above where the bottom rail goes into the gate post. Attach with screws provided in hinge kit.




Center the gate latch (part 6) at the end of the top rail opposite where the hinge was attached. Install as close to the outside of the post as possible. Fasten the latch to the post using the screws from the latch kit.



Install screws to attach where the rail goes into the post (as in page 2 - D) note: you will not need to install white screw into gate on top rail where the hinge is attached.

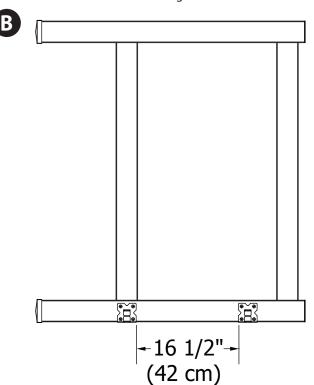

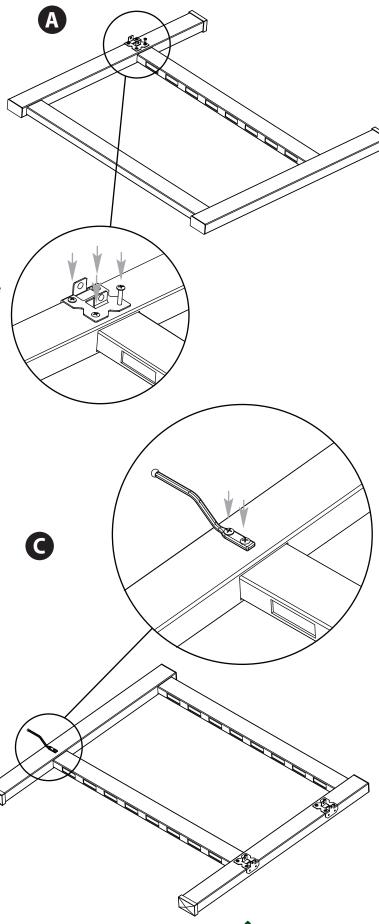

# **Cottage Picket Gate Installation**

# **STEP THREE**

# Α


Slip each picket (part 4) through the top rail and into the bottom rail. Start with the shortest picket(s) in the center, and end with the two longest pickets on each side.


# В

Place one of the remaining halves of the hinge against the inside wall of the arbor post just above the base molding. Using the same method in step 2, attach the hinge to the post. If your arbor does not have base moldings, mount the hinge approximately 8" (20 cm) up from the bottom of the post. Note: We recommend using wood inside the arbor post to create a stronger attachment for the gate. Repeat for the other hinge. Make sure the distance between the two hinges is equal to that in step 2 (16 1/2" or 42 cm).



Lift the completed gate and line up the hinges. Carefully guide the long bolts on the gate hinges through the "eye holes" on the gate hinges.

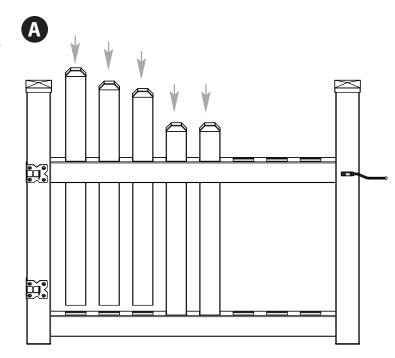

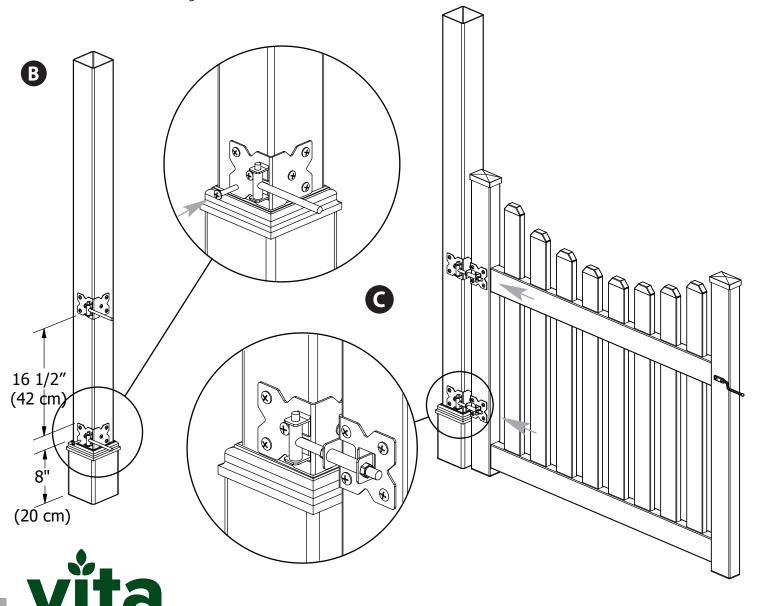

#### STEP FOUR

## **Adjusting Gate**

## Α

Insert the bolt sleeve between the "eye holes" before sliding the long bolts completely through. Thread the 1/2" (13 mm) nuts over the end of each bolt and tighten with a wrench. Note: to center your gate in the arbor opening, adjust the hinge nuts as needed.

## В

Set a level across the top rail to make sure the gate is hanging level. You may need to adjust the hinge nuts again to achieve this.

# C

Once the gate is level, position the latch "catch" onto the arbor post and mark out the hole locations. Pre-drill the holes (use 1/8" (3 mm) drill bit - purchased separately) and fasten the latch catch to the arbor post using the black screws provided with the latch kit.

# D

If latch does not catch into the latch catch properly, you can adjust the hinges by loosening the nuts on either side of the hinge bolt. Close the gate so that the latch is in the latch catch then adjust the nuts as necessary to have the gate hang in position properly. If any other adjustments are needed, repeat as necessary. Gate should swing and close into latch smoothly.

Level

