
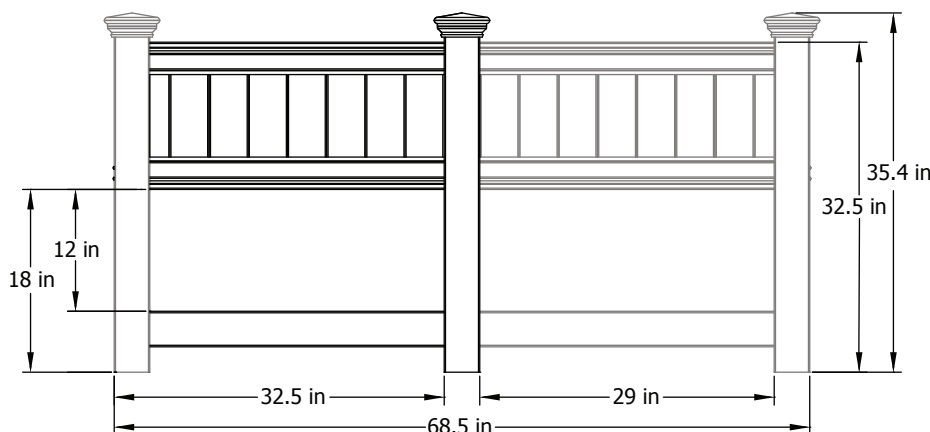


ASSEMBLY INSTRUCTIONS

Eden
Outdoor Collection™

www.edenarbors.com

The Cambridge Raised Planter Box Extension Kit

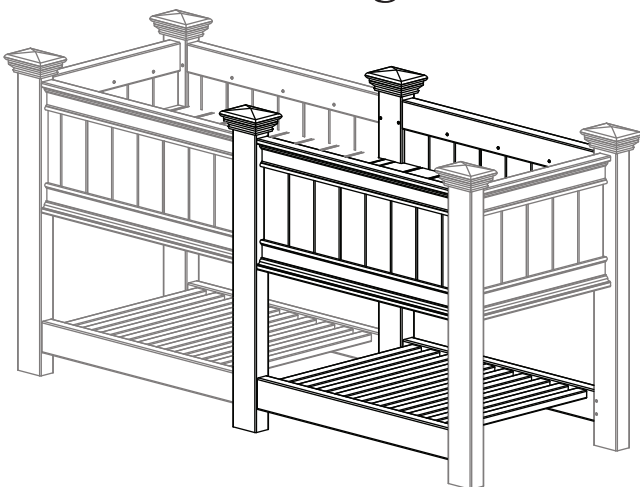


Please read through before starting assembly.

Check Box for These Contents

In the event of missing or defective parts please call our customer service dept. at **1 800 282 9346, ext #20** (Mon. to Fri. 8:00 AM to 4:00 PM EST).

1. Pre-Assembled Front & Back Wall Panels with Posts Connected (2)
2. Floor Panels (3)
3. Floor Supports (3)
4. Post Bridge Extrusion (1)
5. Shelf Boards (10)
6. Post Caps (2)
7. 5/8" Stainless Steel Screws (10)
8. 2 1/2" Stainless Steel Screws (4)

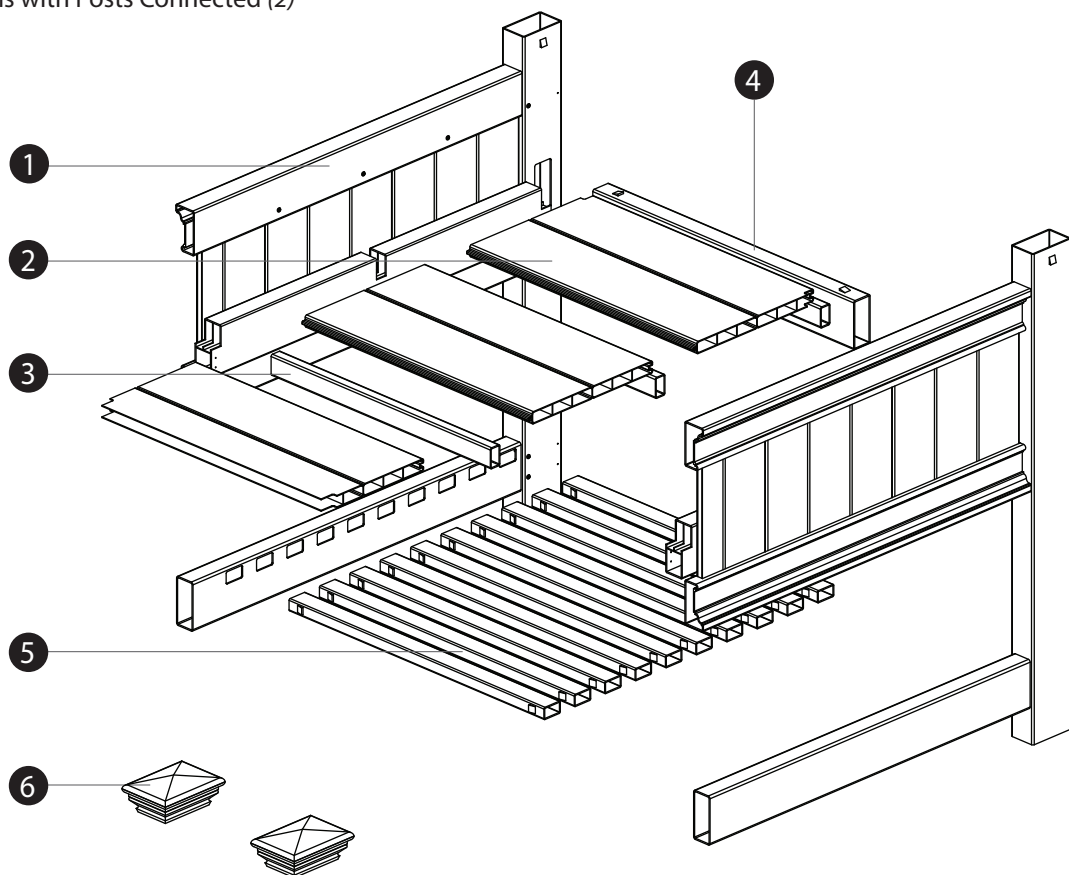

General Information

- **Read Instructions through carefully before beginning assembly.**
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 4'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.



Not to Scale


Ver 2/SEPT 2011

Overview

This instruction is intended to assist with adding an extension kit to your existing raised planter box. Please consult the Cambridge Raised Planter Box Instruction to assemble the 3 ft raised planter box.

Completely assemble the 3 ft Cambridge Raised Planter Box prior to attaching the extension kit.

Some disassembly of the 3 ft planter box will be required to attach the extension kit.

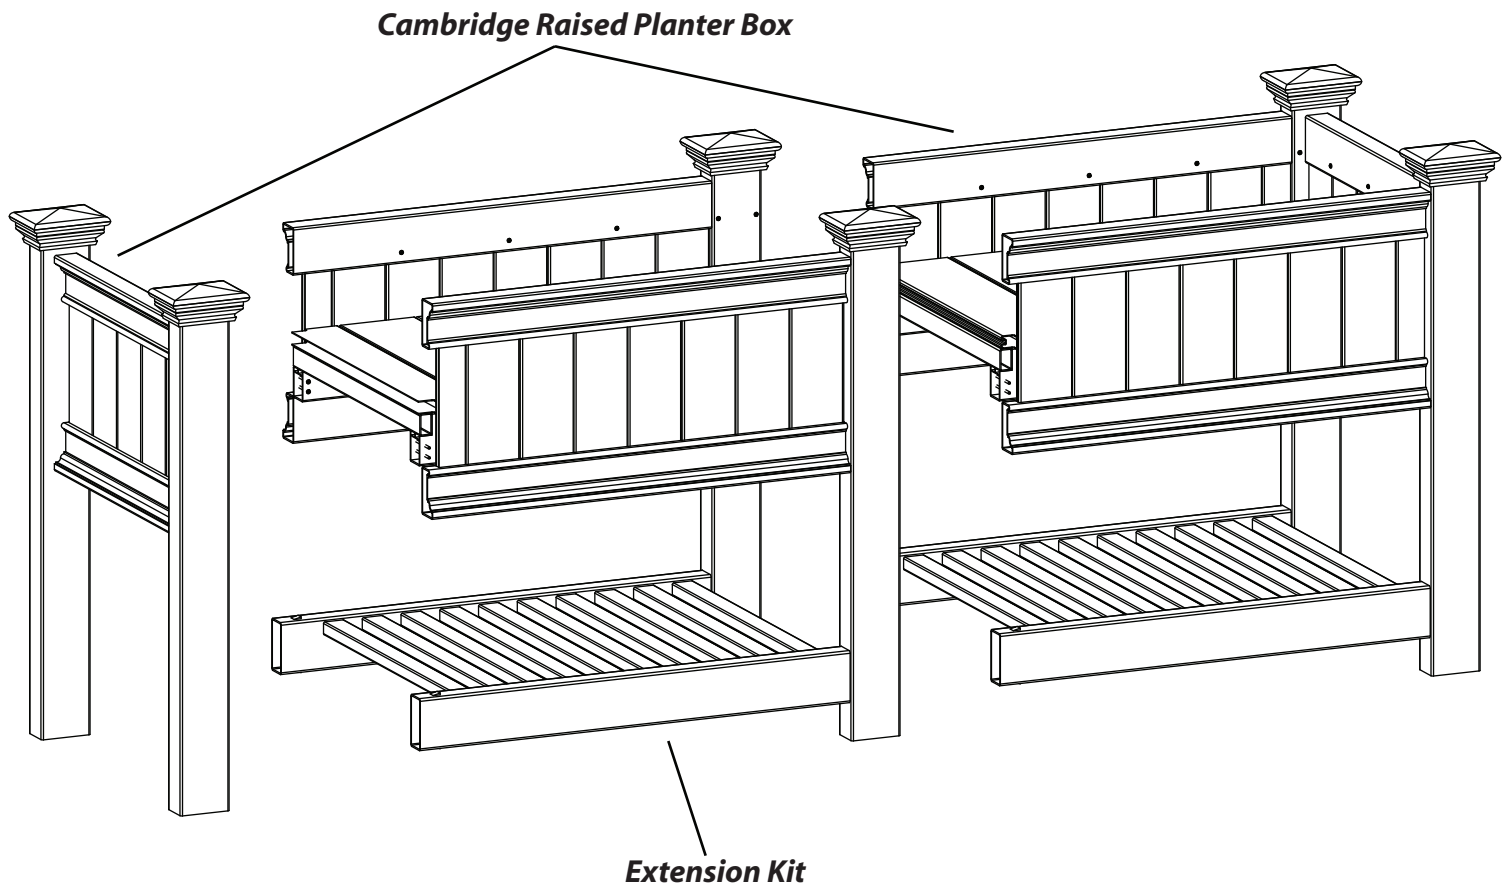

STEP ONE

Disassemble the 3ft Raised Planter Box

1

Remove the floor boards

2





Remove the three floor supports

3

Remove seven screws from each of the two posts on the extending side. Make note of the location of each screw as these will be reused in the next step.

4

Remove the side panel entirely and place aside

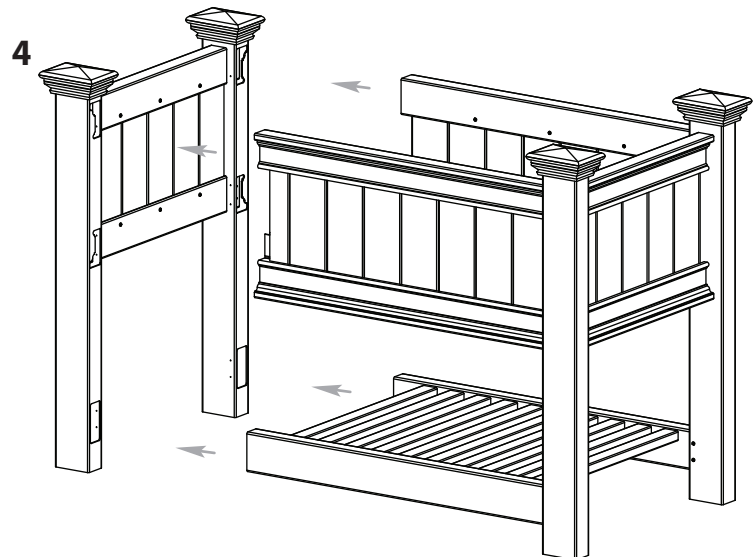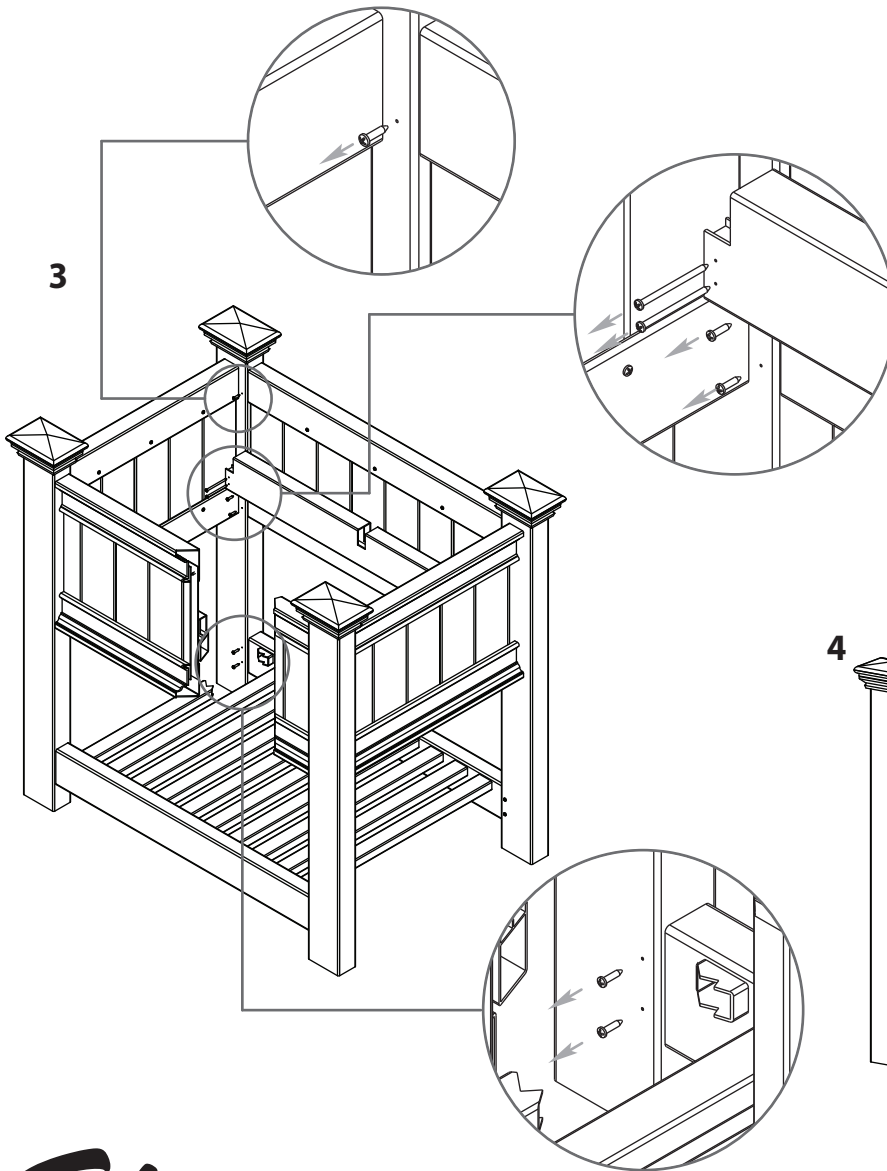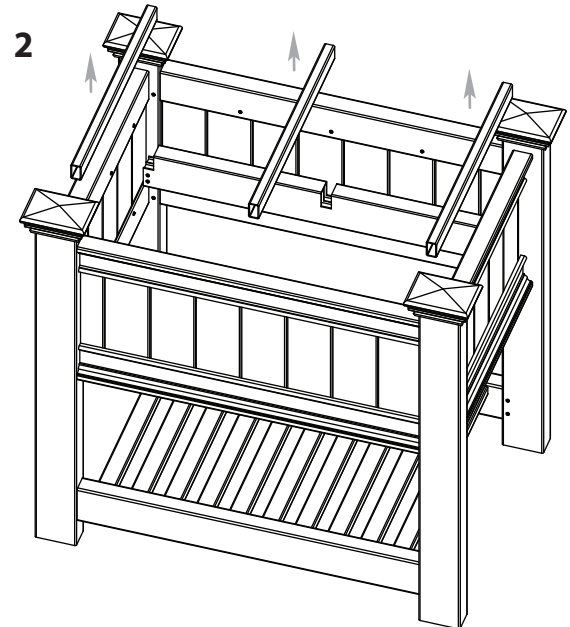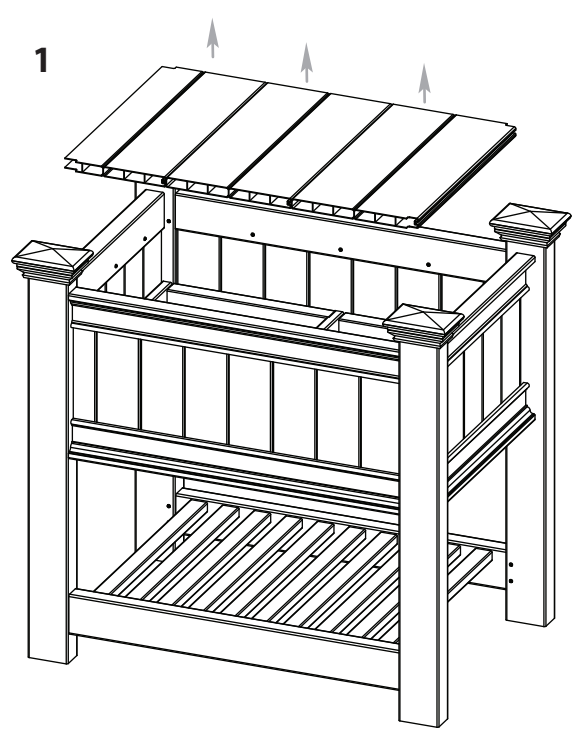

STEP TWO

Assemble and attach the Extension Kit

1

Place the one panel on the floor as shown and insert the ten shelf boards until they all lock in place. Also insert the post bridge into the pre-routed hole on the centre post as shown.

2

Align and attach the second panel to the sub-assembly.


3

Attach the extension kit to the side panel which was put aside from step 1-4


4

Re-fasten the side panel to the two posts using the screws from step 1-3


2

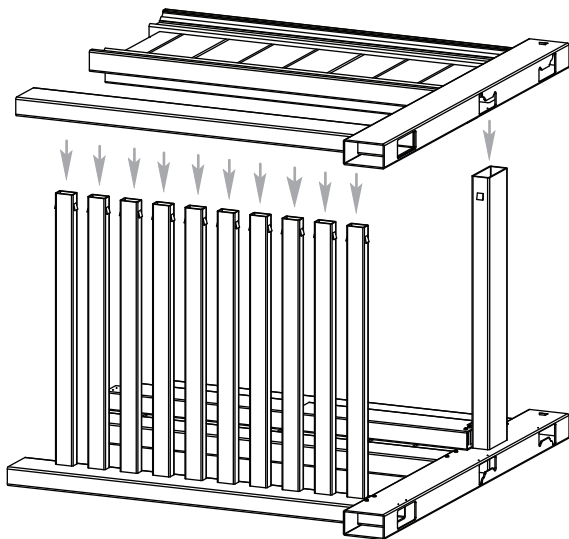


3

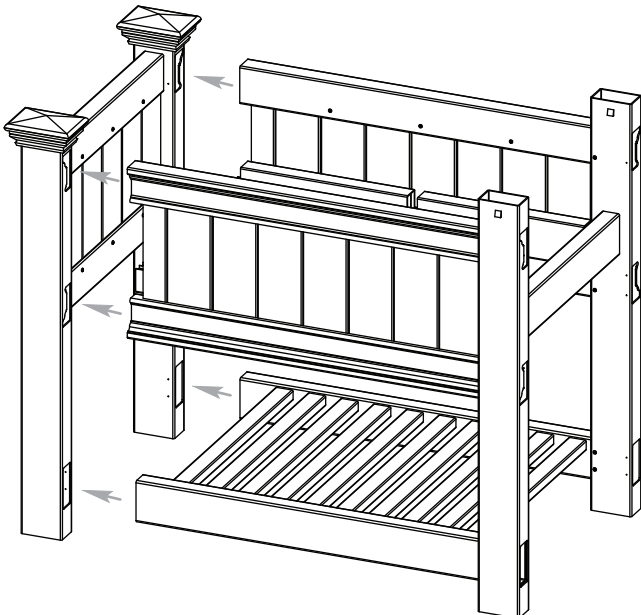

1

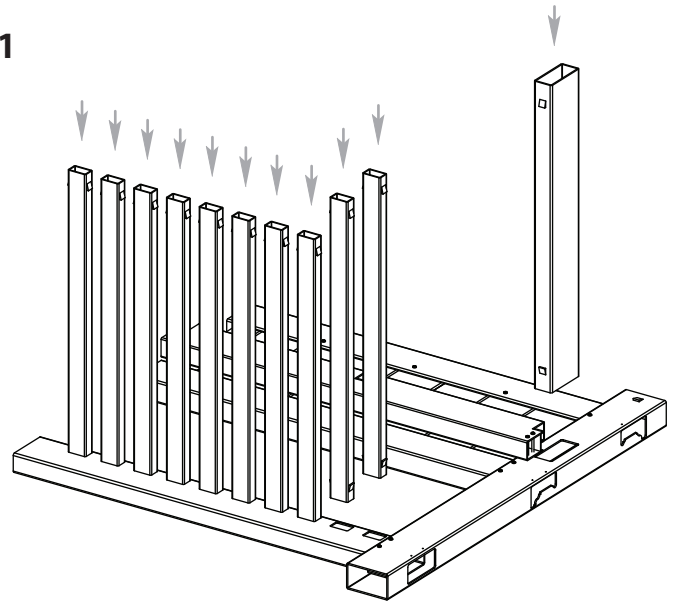

4

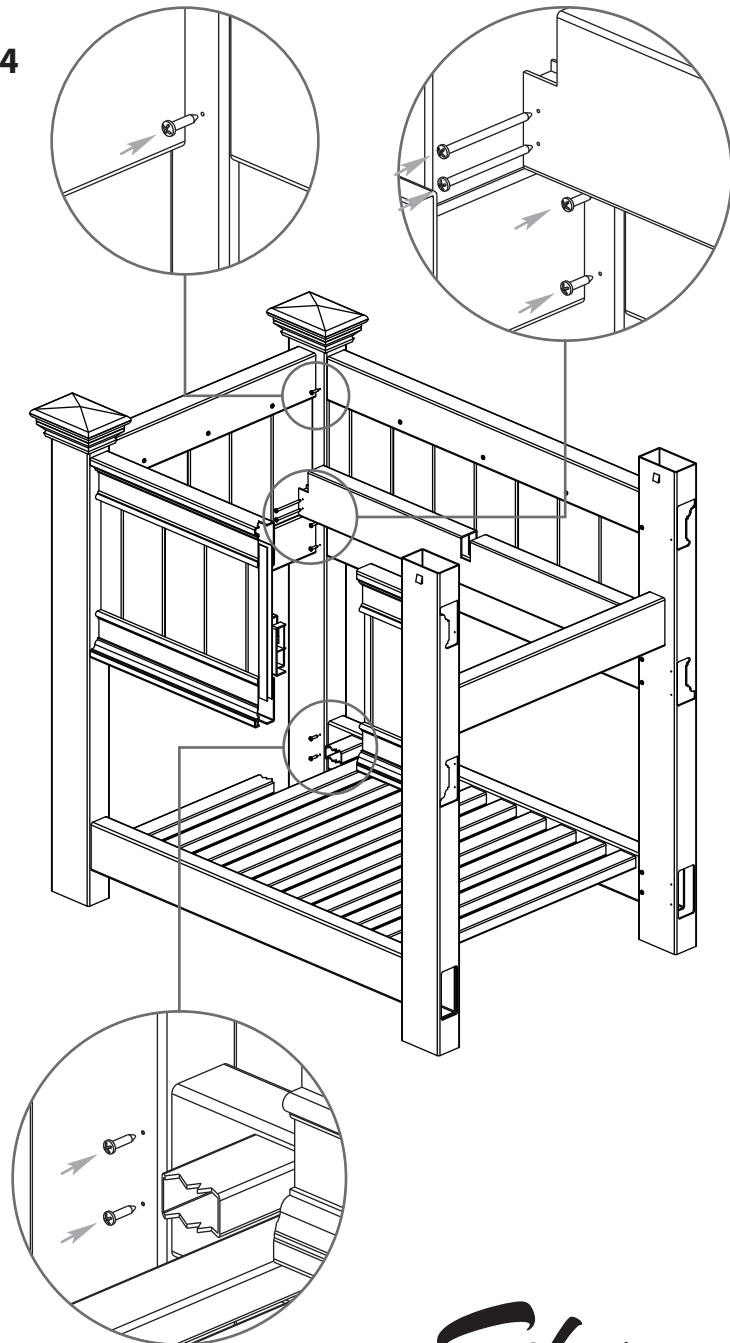


STEP THREE

Attach the Extension Kit


1

Align and insert the extension kit assembly to the 3 ft planter box into the pre-routed holes as shown.

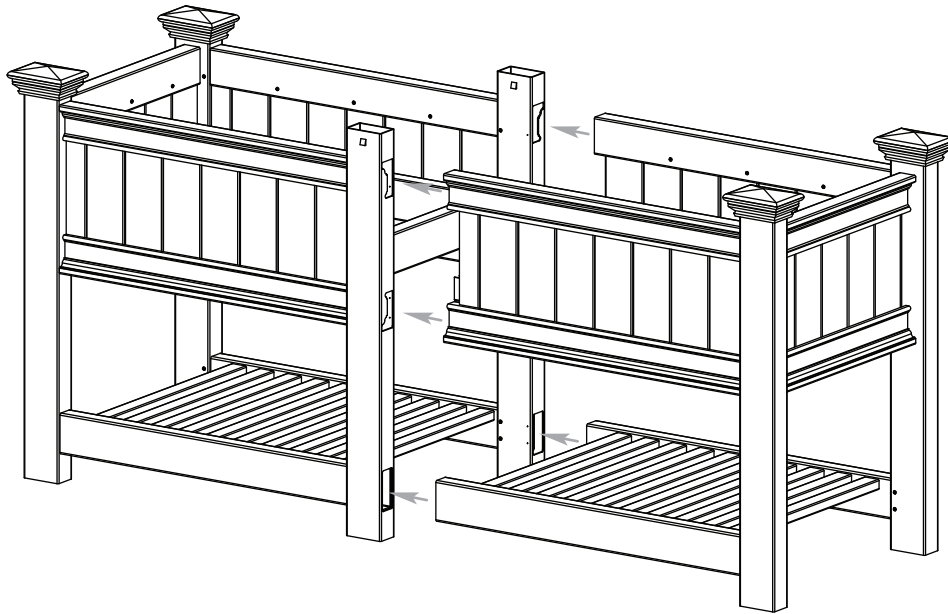

2

Using the provided screws, fasten the extension kit to the two centre posts.

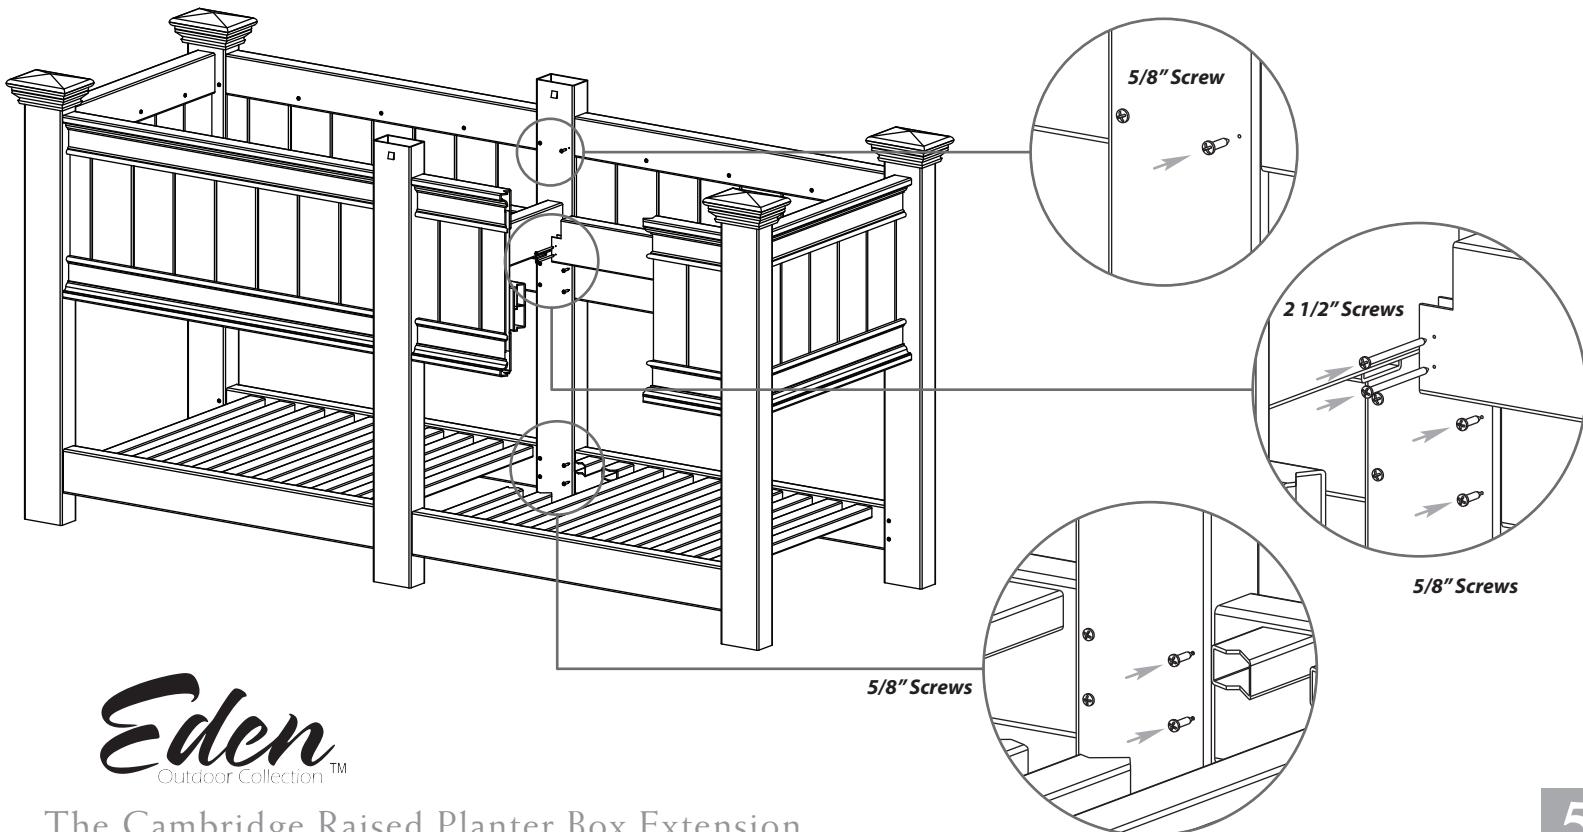

STEP FOUR

1



Replace the floor supports (six total)

2


Replace the six floor boards

3

Attach the post caps to the centre posts until they lock in place

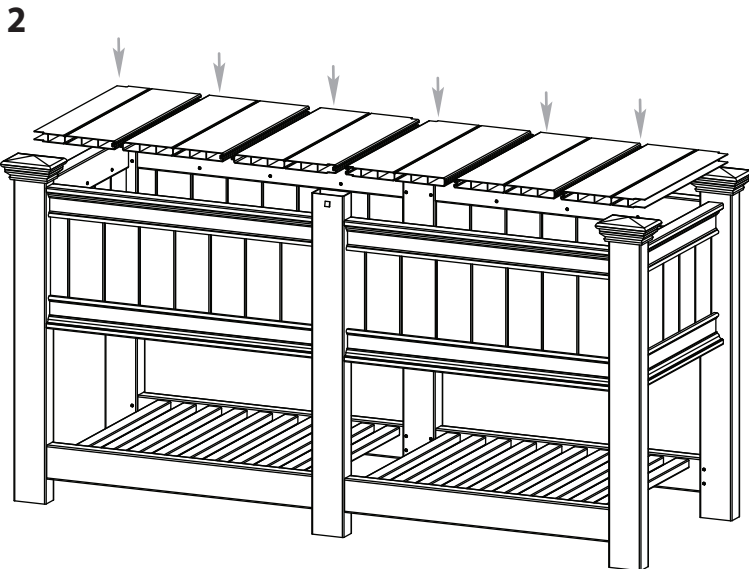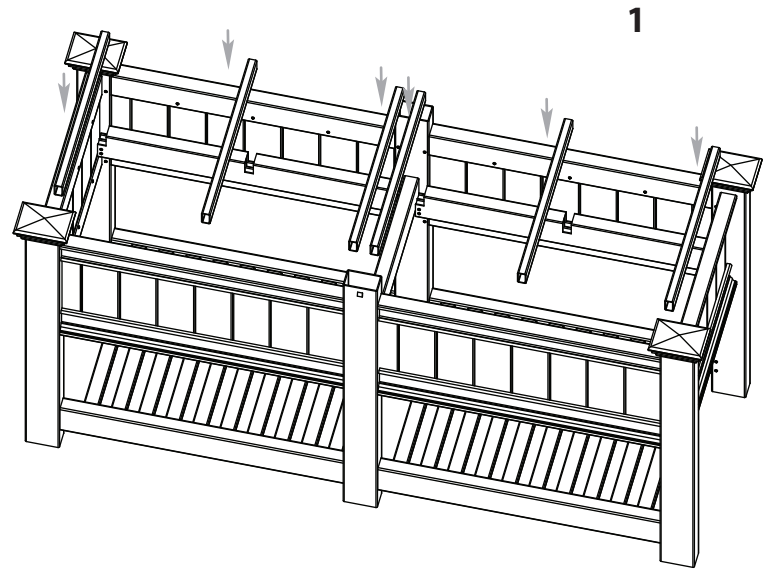

3

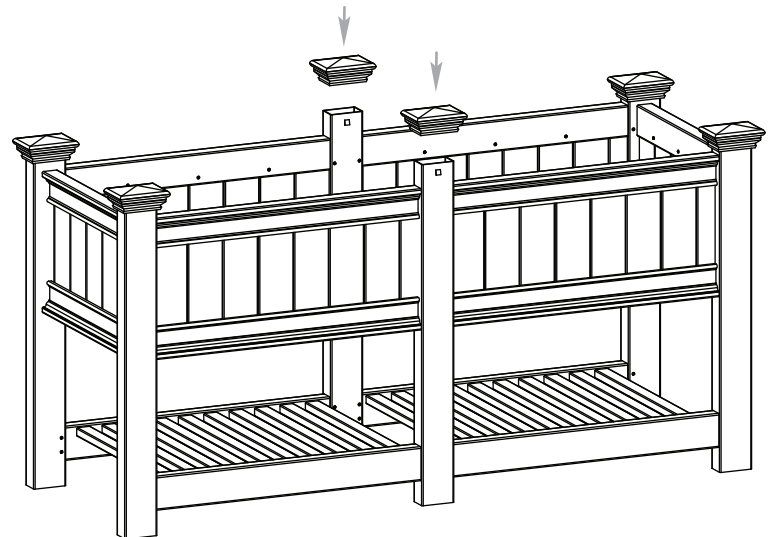

Eden
Outdoor Collection™