



# ASSEMBLY INSTRUCTIONS

**New England**  
Arbors

Leadership by Design

[www.newenglandarbors.com](http://www.newenglandarbors.com)

## 6 x 6 African Keyhole Garden

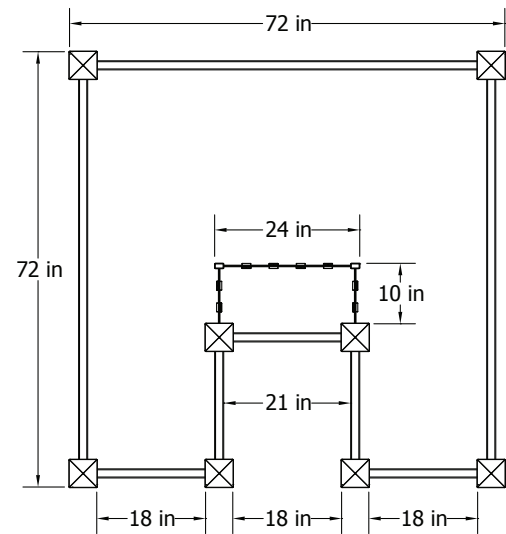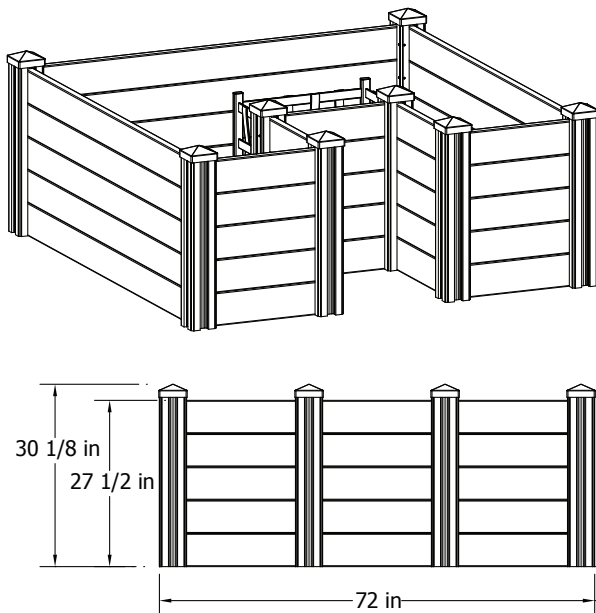


*Please read through before starting assembly.*

### Check Box for These Contents

In the event of missing or defective parts please call our customer service dept. at **1 800 282 9346, ext #20** (Mon. to Fri. 8:00 AM to 4:00 PM EST).

1. Post Caps (8)
2. Wall Boards - Short (25)
3. Wall Boards - Long (15)
4. Posts (8)
5. Basket Horizontal Slats - Short (10)
6. Basket Posts (2)
7. Basket Horizontal Slats - Long (5)
8. Basket Vertical Slats (8)
9. Basket Post Inserts (2)
10. 1-1/2" Self-Auguring Stainless Steel Screws (4)
11. 4" Self-Auguring Stainless Steel Screws (80)

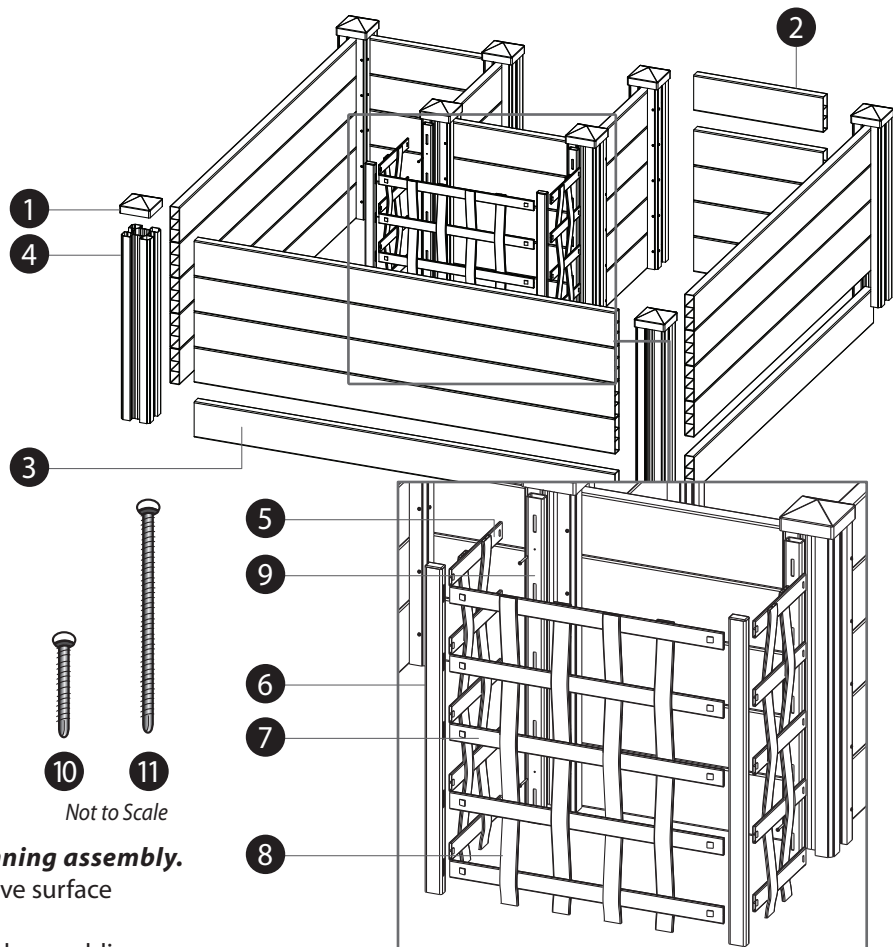

Not to Scale

### General Information

- **Read Instructions through carefully before beginning assembly.**
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 8'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

## STEP ONE

### Composting Garden Assembly

**1**

Starting with one corner post, insert two long boards into the post as shown and fasten with two of the 4" screws.


**2**

Add another post, long board, and short board to the assembly and fasten with another two screws as shown.


**3**

Continue adding boards along the perimeter of the garden and screw into place using 4" screws until the garden bed is complete and looks like image 3.


Note that there are two different lengths of boards.

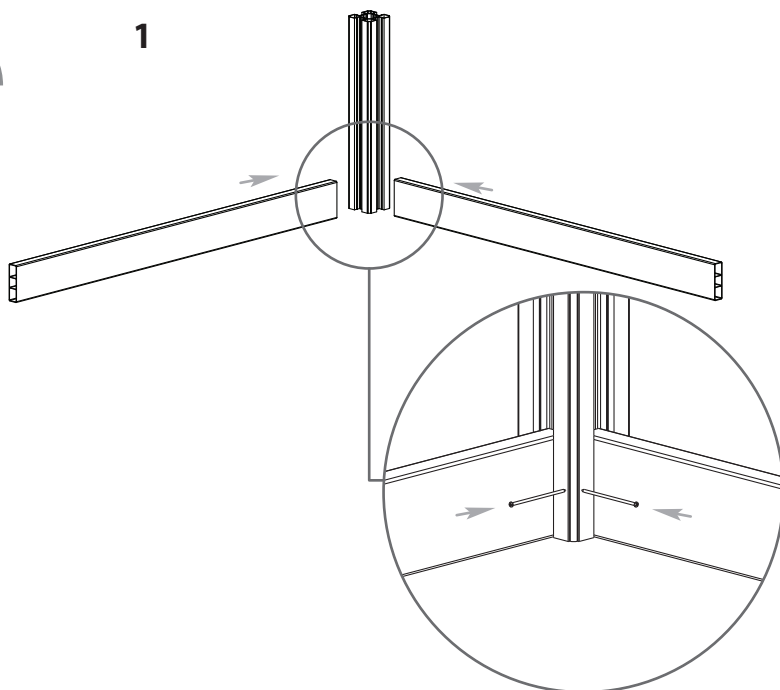

**2**

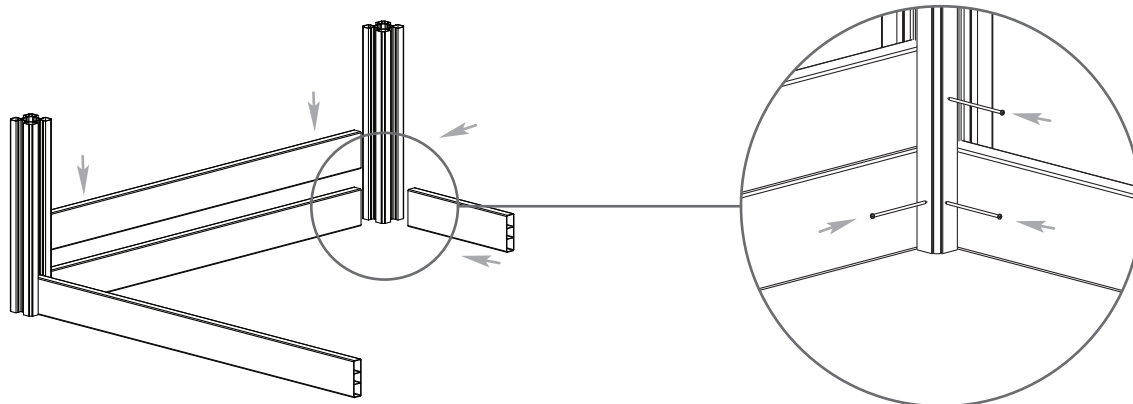

**3**

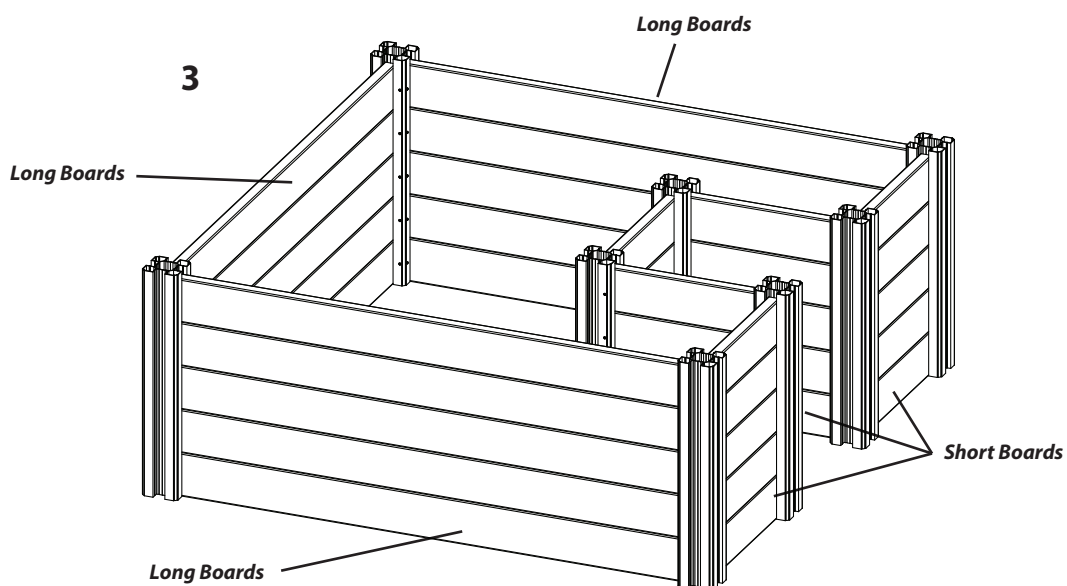

## STEP TWO

### Garden Basket Assembly

**1**

Arrange the four basket posts as shown. Note that there are two different types of posts (routed holes on one face vs routed holes on two faces). Also note where those routed holes are facing.

**2**

Connect two of the posts with five short slats as shown. Note the tabs on each end of the slats; once inserted, the slats will lock into place.

Repeat for the other side.

**3**

Connect the two sides with five long slats as shown.

**4**

Weave the vertical slats through the horizontal slats. It will be easier to weave the four vertical slats in the middle area first and then space them out afterwards.


**5**

Repeat for the sides of the basket.


**6**

Space the vertical slats accordingly. Spacing on short side should be  $\pm 2"$  and  $3"$  on long side for the slats.


**1**

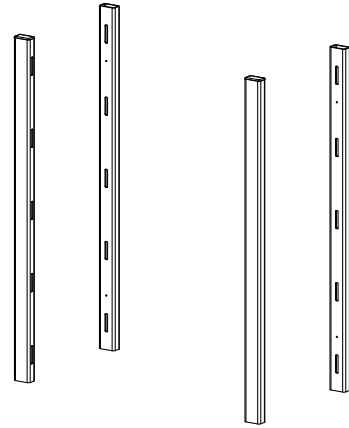


**2**

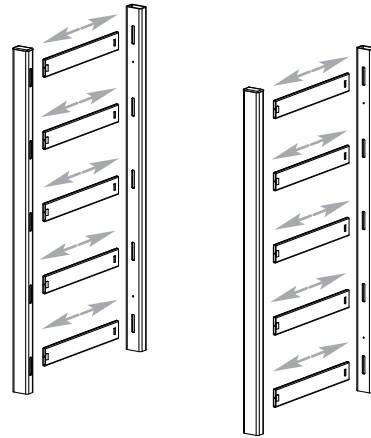


**3**

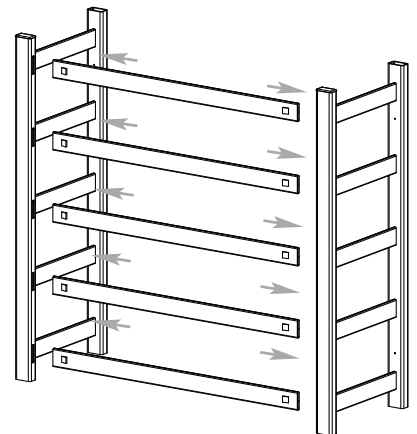


**6**

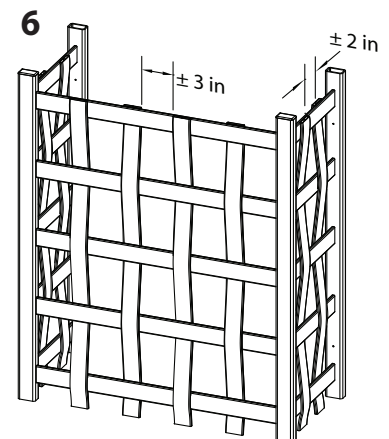

**4**

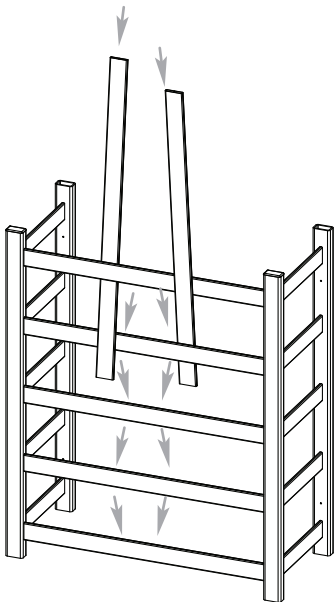

**5**

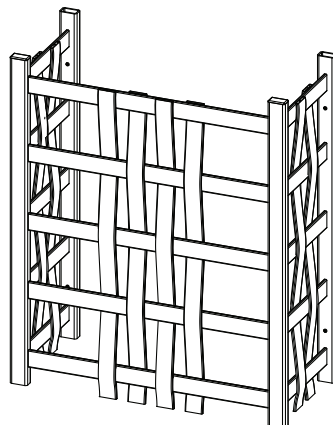

## STEP THREE

### Garden Basket Installation

**1**

Carefully insert the end posts of the basket assembly into the grooves of the posts as shown in figure 2.


**2**

Fasten the basket into place using four 1 ½" screws through the pre-drilled holes.


**3**

Install post caps as shown.

**1**

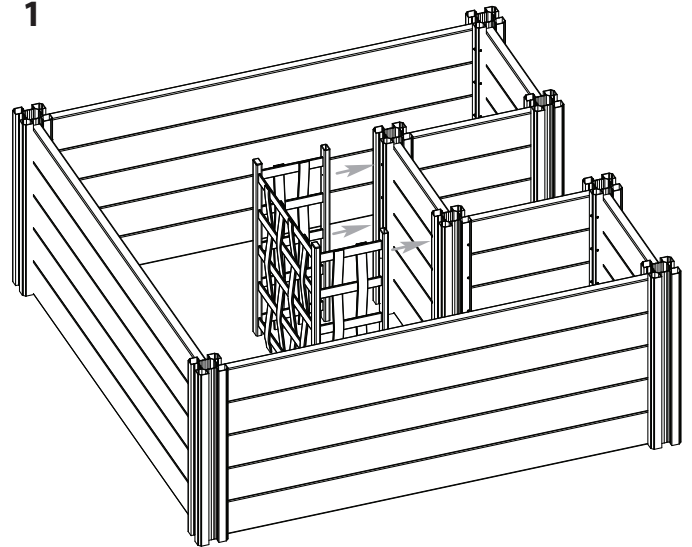

**2**

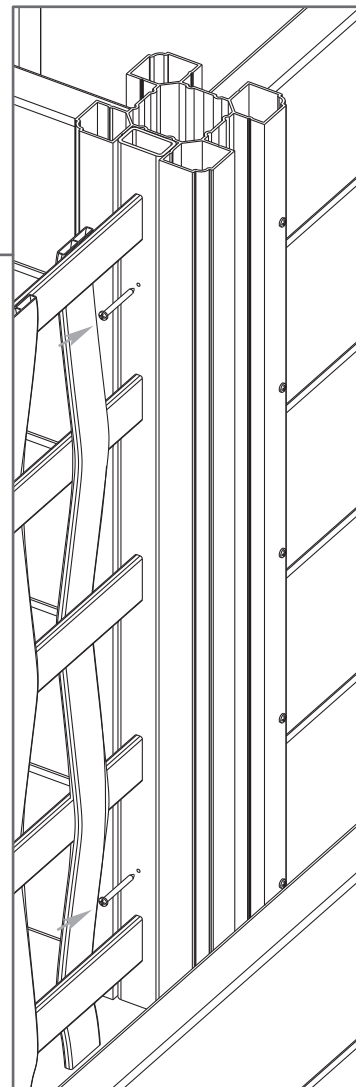

**3**

