Arbor Mounting System

Installation & Mounting Instructions



Ground Mount

Materials Include:

- 4 Galvanized Steel Ground Augers
- 4 Plastic Mounting Sleeves
- 4 Bolts & Wing Nuts
- 4 White Stainless Screws
- 1 Steel Turning Rod

General Information:

- 1. Read instructions carefully before assembling.
- 2. Identify each component from material list.
- 3. In the event of missing or defective parts, Please call our customer service department:

North America ph# **1-800-282-9346** (Mon. -Fri. 8 am to 4 pm EST)
United Kingdom ph# (44) 2038 687160 (Mon.-Fri. 1 pm to 10 pm GMT)



Surface Mount

Materials Include:

- 4 Galvanized Steel Surface Mounts
- 4 Plastic Mounting Sleeves
- 4 Bolts & Wing Nuts
- 4 White Stainless Screws

Additional Hardware Required:

16 1/4" (6 mm) x 2 3/4" (70 mm) Cement Screws with Drill Bit (3/16" (4.7 mm), Minimum 3" (76 mm) Long)

Tools Required:

- 1. Cordless Drill
- 2. Spirit Level
- 3. Tape Measure

1



Refer to your arbor instructions for exact dimensions between posts. Measure out and mark on the ground each post location. Double check your spacing before continuing.

2



Turn the auger using the turning rod and apply even downward pressure. For dry or hard ground, use water to soften the ground first.

3



As you turn the auger into the ground, check with your level to ensure it is straight. Do this at least twice before you have completely installed the mount.



Once the ground stop (see sketch 3 below) is at ground level, the mount is completely installed. Slide the plastic sleeve over the steel mount until the bottom rests on the ground stop.




Line up the holes in the plastic sleeve and steel mount. Take a bolt and wing nut (included) and insert it into the hole until it is firmly in place. Repeat steps 2 to 5 for the remaining mounts.



Once you have installed and verified the orientation of each mount, set your arbor posts onto the mounts and push down to ground level. Using one of the screws provided, secure the bottom of each post to the mounts as shown.

Additional Information:

- 1. For installation of the surface mounts on concrete, use drill bit (not provided) to drill pilot holes. Fasten each mount in place using cement screws (not included).
- 2. For installation of the surface mounts on wood or a similar surface, use wood screws (not included).
- 3. Basic identification sketch of each part:

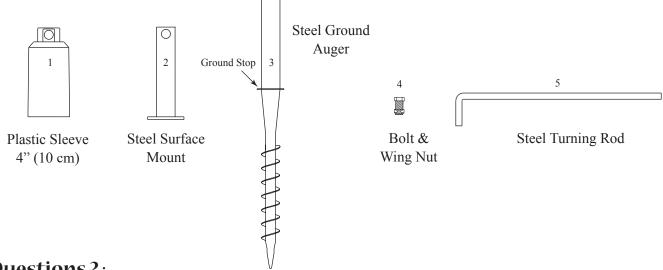

Questions?:

If you have questions concerning the installation of this product and require assistance, please call our **Customer Service Department:**

- North America ph# 1-800-282-9346, (Mon. -Fri. 8 am to 4 pm EST)
- **United Kingdom ph# (44) 2038 687160** (Mon.-Fri. 1 pm to 10 pm GMT)

If you have comments or suggestions about this product, let us know! Thank you for purchasing the "Arbor Mounting System".