

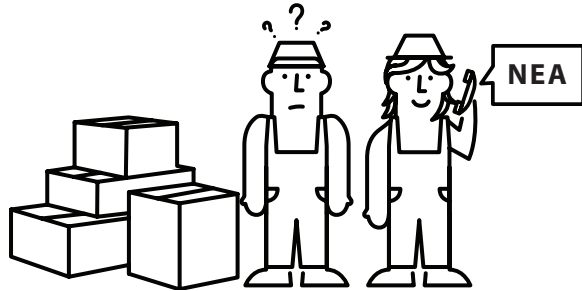



— X —

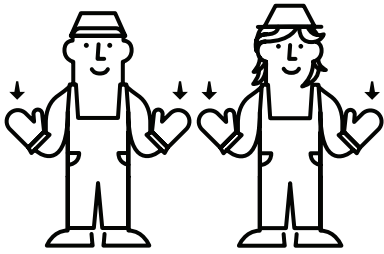

 **1-800-282-9346**

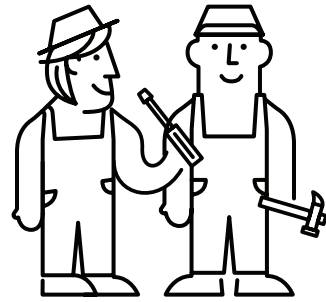

HELLO@WEAREVITA.COM



WWW.WEAREVITA.COM




8 h - 17 h EST




IN THIS GUIDE

PARTS LIST	4
TOOLS YOU WILL NEED - PRODUCT DIMENSIONS	5
STEP 1 AND 2	6
STEP 3 AND 4	7
STEP 5 AND 6 (TEMPORARY INSTALLATION)	8
STEP 7 (PERMANENT INSTALLATION)	9


PARTS LIST

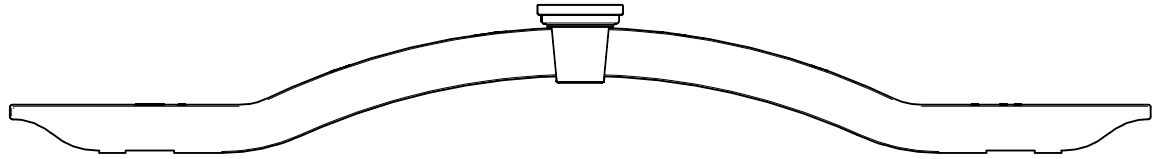


PREASSEMBLED ARCH - 12009 - X2

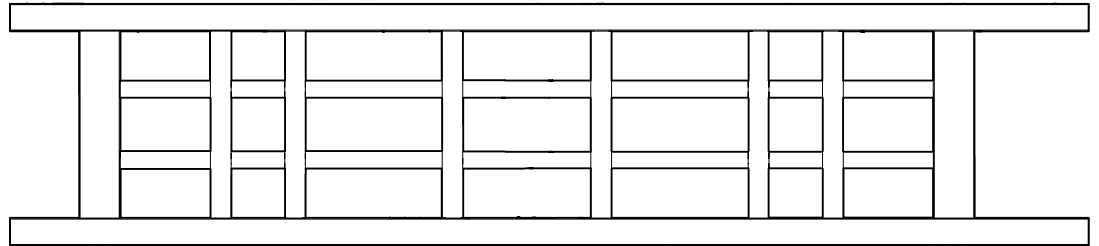


PRE-ASSEMBLED SIDE PANEL - 12008 - X2




ARCH RAFTER - 12007 - X6




METAL GROUND STAKES - 12006 - X4

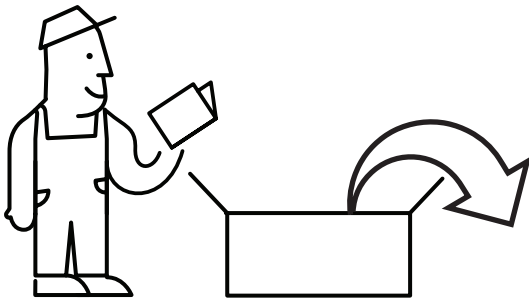


BRACES - 12005 - X4




SCREW A - 20037- 1 1/2IN (3.8CM) - X12 - TO ATTACH RAFTERS TO ARCH




SCREW B - 20064 - 1 1/4IN (3.18CM) - X8 - ATTACH GROUND STAKES TO POSTS



SCREW C - 20068 - 2IN (5CM) - X4 - TO ATTACH THE FLAT PART OF THE BRACES TO ARBOR POSTS







SCREW D - 20069 - 3IN (7.6CM) - X4 - TO ATTACH THE SWOOP PART OF THE BRACE TO ARBOR



SCREW E - 20070 - 3 1/2IN (9CM) - X8 - TO ATTACH SWOOP PART OF ARCHS TO ARBOR POSTS

TOOLS YOU WILL NEED

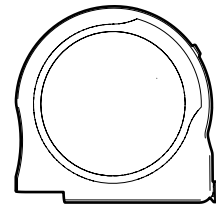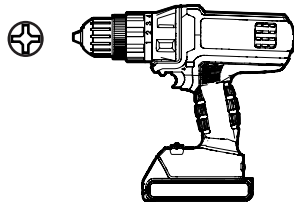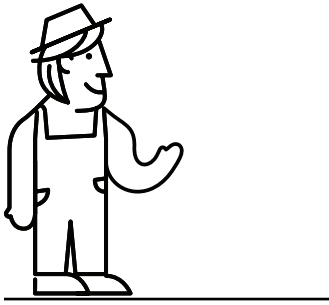

PRODUCT DIMENSIONS

